


Be careful and Remove
Red Plug from Fob



Mount Fob and meter in
Cold room in a safe and
clean position.



Mount Digital touch screen
display in bar easily visible to
bar person

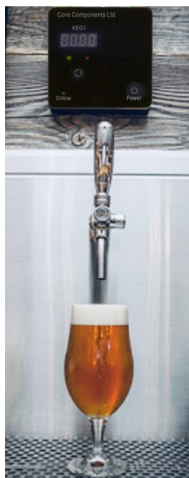

Connect Fob and meter unit in cold
room with digital screen display in Bar.

5 core Alarm cable Recommended up to
200 meters (600')

Connect Fob and meter unit
to Bar Tap and Keg

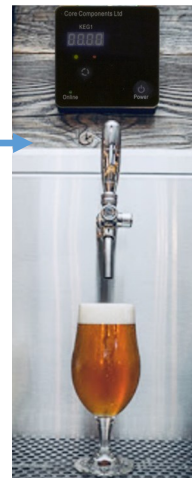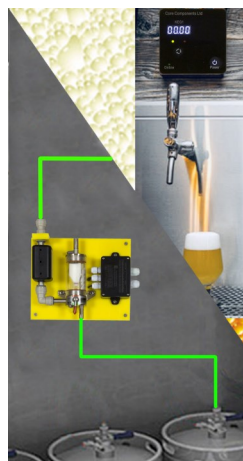

Push Vent Mechanisms down
until Sight Glass is full of Beer.

Only use recommended tube on Vent
exit (PU6x4 clear tubing).

Rotate Float Lifter into **Red** area
to lift float and rotate back into
Green to run Position



Accurate display of Litres/Fluid
ounces consumed .

Press and hold for 3
Sec to Turn display on
and off .

Digital touch screen display in
bar to indicate accurate usage
of beer from our inline Ultra-
Sonic Flow Meter

 
Press and hold for 3 Sec to reset Digital
display when needed






Green light Indicates Keg in use

Red light Indicates Keg empty

1. Begin dispensing beer
2. When beer keg is empty **Red** light on display unit will indicate so.
3. Ensure the beer tap is put back to the **off position** while changing keg otherwise foam will enter beer line.
4. **Red** light on display unit will indicate keg is empty and **green** light will indicate that keg is in use and beer used will register on display unit.
5. Digital Display Unit will indicate usage of beer from keg; therefore, bar person will be aware when keg is near to change.
6. To shut down the display unit hold finger on power button for 3 seconds. when digital unit is switched on again, it's built in memory will revert it back to its previous reading and take up where it left off in beer usage from keg.
7. To reset the flow value to zero on the chosen keg,  hold button down for 3 seconds on digital display.

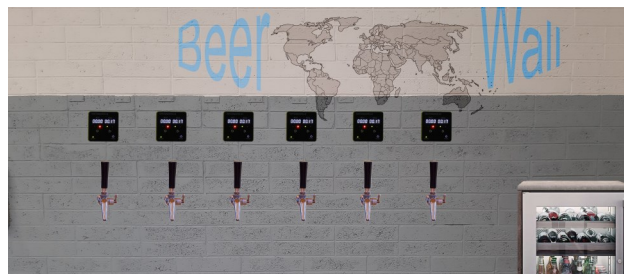

REV. 1

- Use competent installer.
- Use appropriate connections & tubes.
- Do not exceed maximum Beer line pressure.
- Do not use alcoholic cleaner on Sight glass.

Supplier

Quick Set-up


Core Components Ltd
Manufacturers for the Dispensing Industry



Core Monitor



Remove Equipment
Carefully From Box

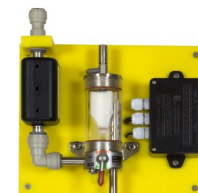

Communication Cable Not
Supplied

5 Core Alarm cable Recommended
up to 200meters (600')